BESTWARE Hardware Production Co., Ltd.

Add: Block 8, No.6, Jianda Nan Road, Jiangmen, Guangdong, China

Website: www.bestware-sparkling.com

Email: business@bestware-stainless.com after-sales@bestware-stainless.com

WhatsApp: +86 18929047065 Tel: +86 750 3108801

Wechat: +86 18929047065

Website YouTube WhatsApp Wechat

2026 V1.2

Stainless Steel Cabinet

INSTRUCTION MANUAL




MSCB01


ONE-STOP SOLUTION PROVIDER OF COMMERCIAL WATER DISPENSER

1. Scan the QR code on the panel to identify the left/right side panel.


722*600*18m

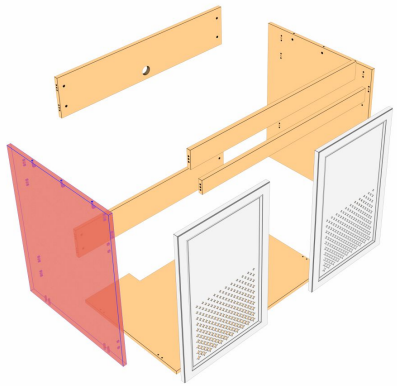

722*600*18m

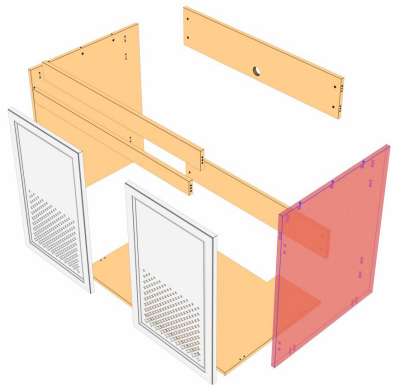


2. Install the cam bolts and locating pins onto the side panel according to the pre-drilled holes.

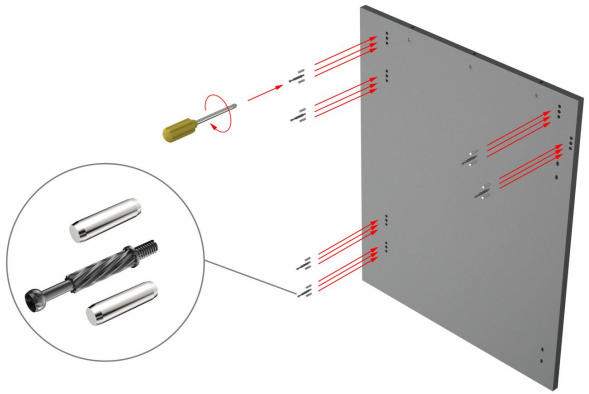




3. Scan the QR code on the panel to identify the upper and lower rear panels.


864*180*18mm

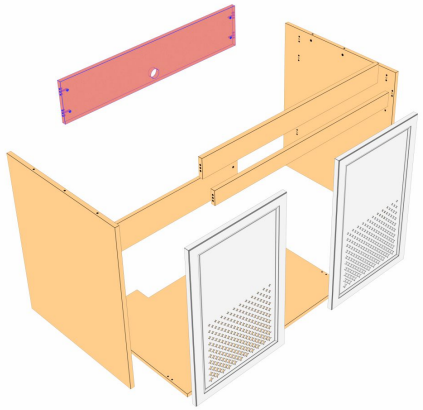


864*150*18mm

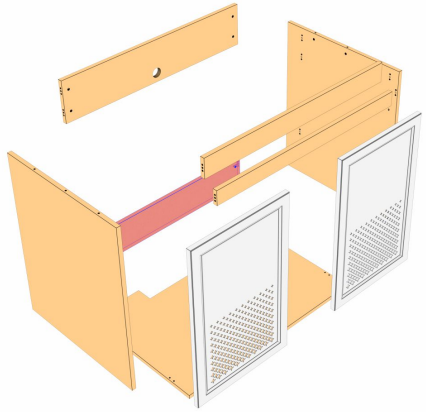


4. Make sure the cam locks face inward. Align the holes on the rear panels with the cam bolts and locating pins on the side panels. Pierce the protective layer covering the cam locks and turn the cam locks clockwise to secure.

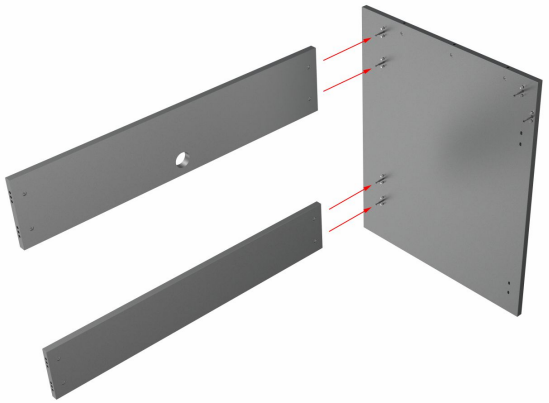

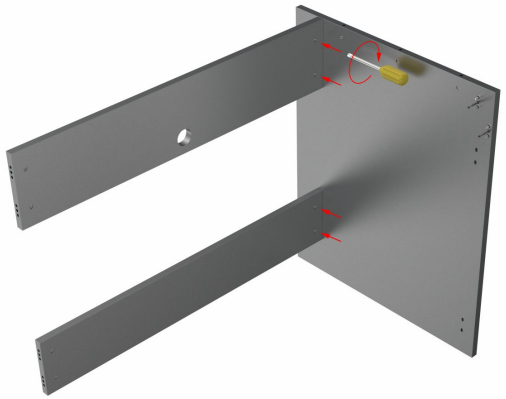


5. Scan the QR code on the panel to identify front panel 1 and front panel 2.


864*80*18mm

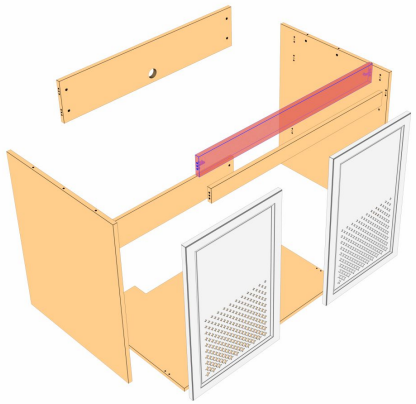


864*60*18mm

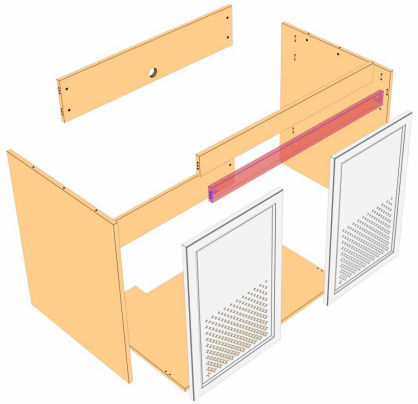


6. Make sure the cam locks face inward. Align the holes on the front panels with the cam bolts and locating pins on the side panels. Pierce the protective layer covering the cam locks and turn the cam locks clockwise to secure.

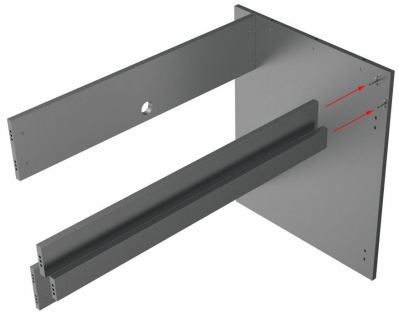

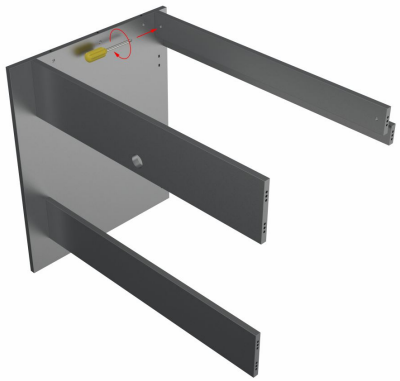


7. Locate the remaining left/right side panel and repeat steps 2, 4, and 6 to complete the installation.

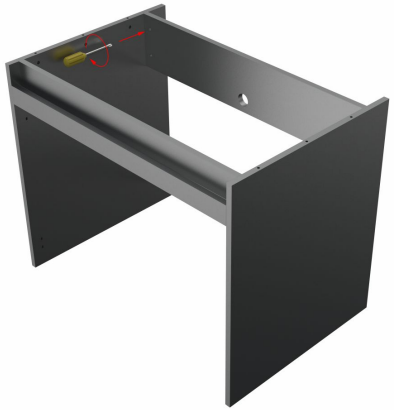


8. Scan the QR code on the panel to identify the bottom panel.


900*600*18mm

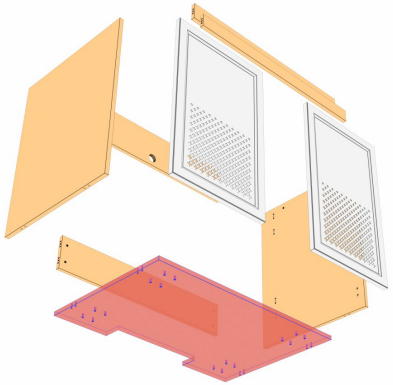


9. Locate the long self-tapping screws and install them according to the positions shown in the illustration.

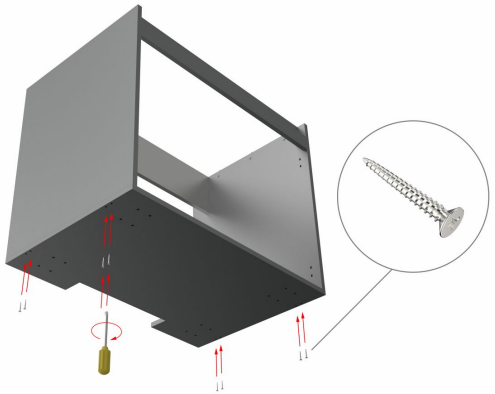


10. Locate the casters and black self-tapping screws, and install them according to the positions shown in the illustration.

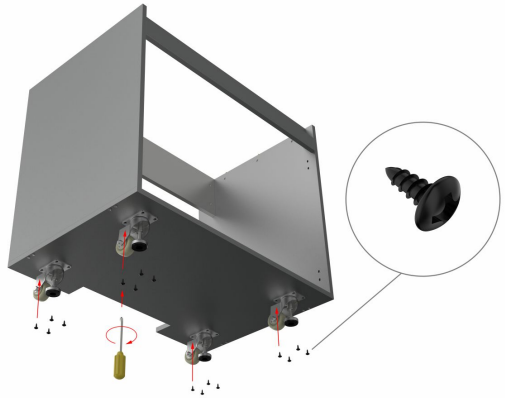


11. Locate the hinge mounting plates and self-drilling screws. Install the hinge mounting plates onto the left/right side panel. Do not fully tighten the screws to allow vertical adjustment.

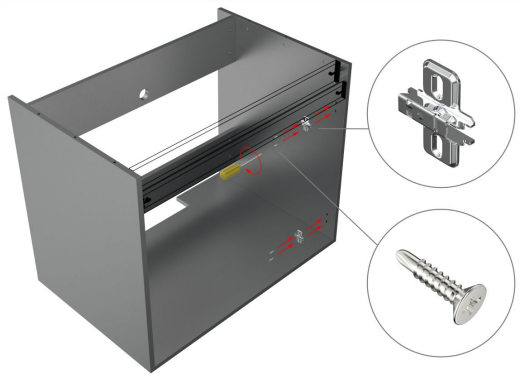


12. Locate the top panel and cam bolts.

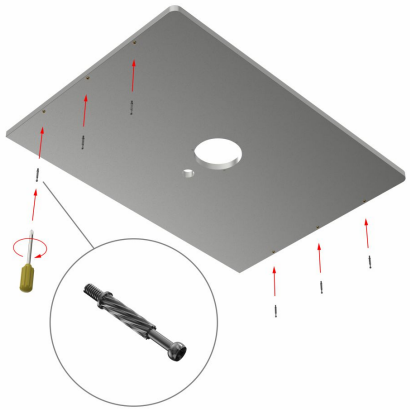


13. Align the cam bolts on the top panel with the holes on the side panels. Pierce the protective layer covering the cam locks and turn the cam locks clockwise to secure.

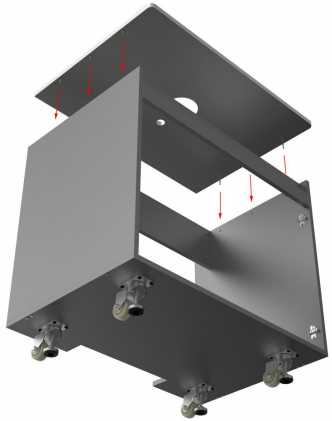


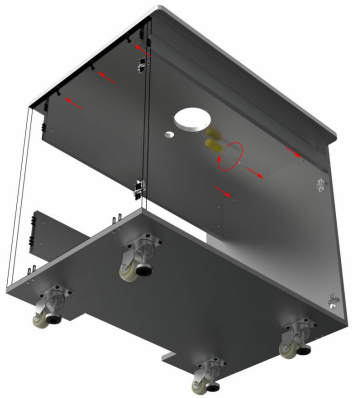


14. Install the drip tray according to the product manual.

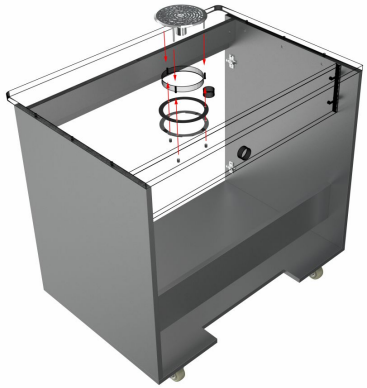


15. Connect the drain pipe to the drip tray using the silicone hose. Tighten the upper and lower hose clamps to secure the connection.

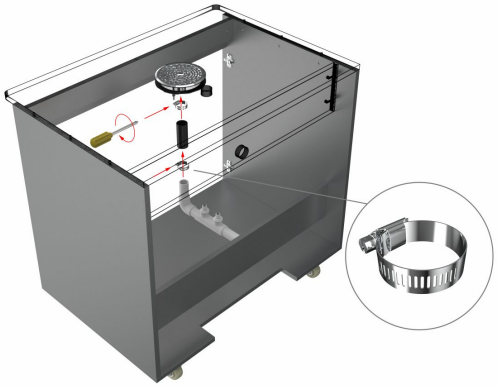

16. Locate the corrugated hose. Insert the end with the silicone connector through the hole in the upper rear panel, then connect it to the internal drain pipe.

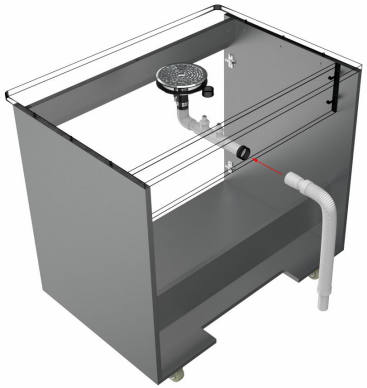


17. The cabinet frame assembly is complete.

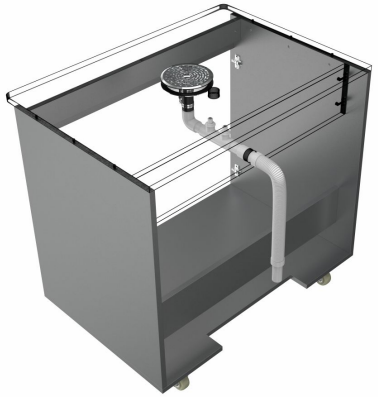


18. Scan the QR code on the panel to identify the left/right door panel.


705*447*20mm

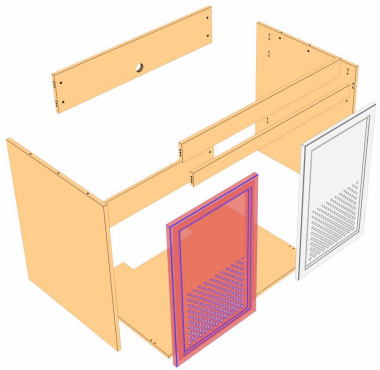


705*447*20mm

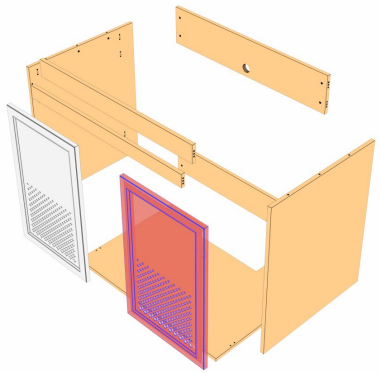


19. Remove the countersunk machine screws from the door panel by turning them counterclockwise.

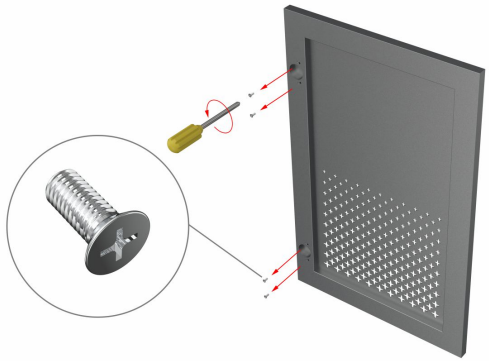


20. Locate the hinge components and install the hinges onto the door panel using the original countersunk machine screws.

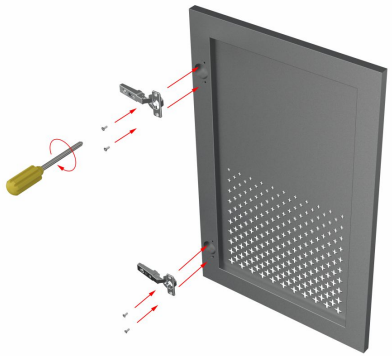

21. Attach the hinges on the door panel to the hinge mounting plates on the side panel according to steps ①–②. Tighten the self-drilling screws on the hinge mounting plates, then adjust the hinge adjustment screws to ensure even door gaps and proper door alignment.

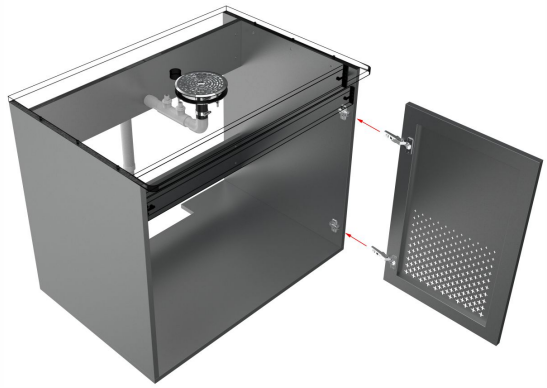

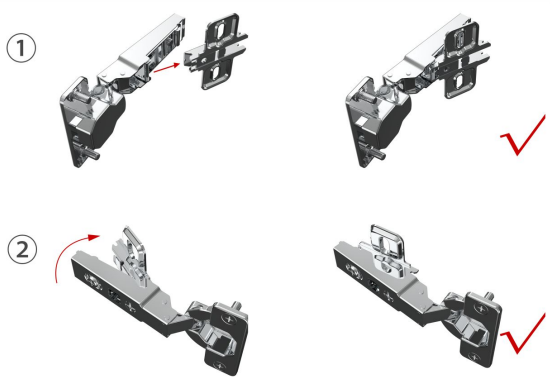

22. After installing the door panels, install one soft-close damper on each left/right hinge.



23. After completing the cabinet assembly, refer to the corresponding product manuals for installation of the selected configuration.



Version	Change Description
2026 V1.0	Initial release
2026 V1.1	Optimization of countertop installation structure
2026 V1.2	Optimization of cabinet structure